



# Full extension undermount slides installation


## Drawer installation dimensions(with locking device)

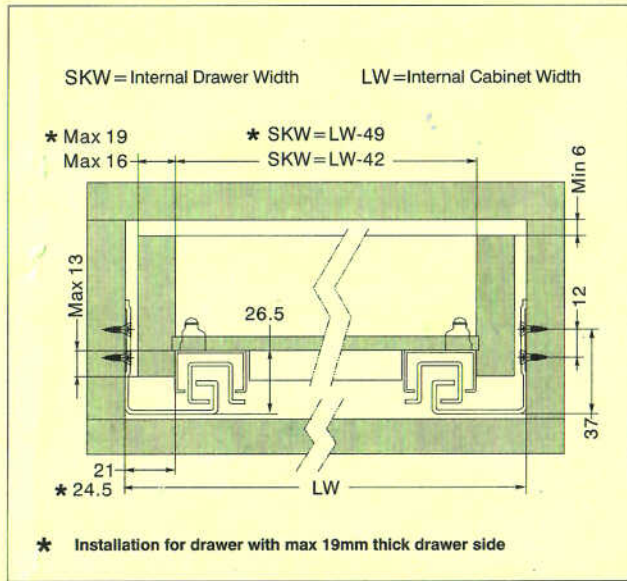


## Drawer installation dimensions(with peg)

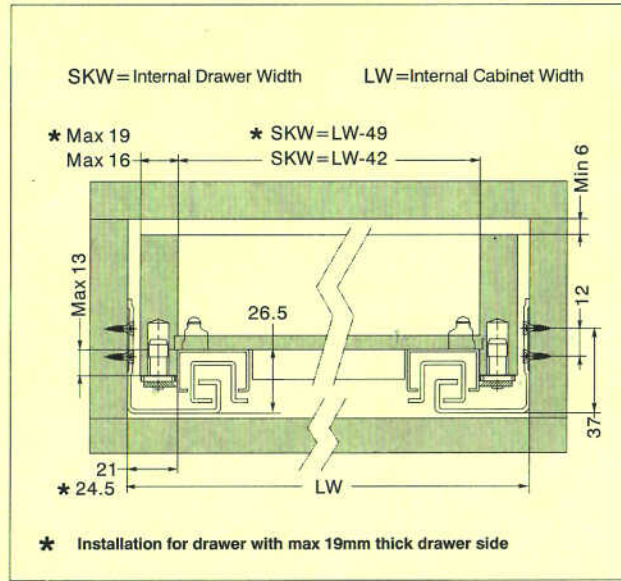


## Drawer installation dimensions

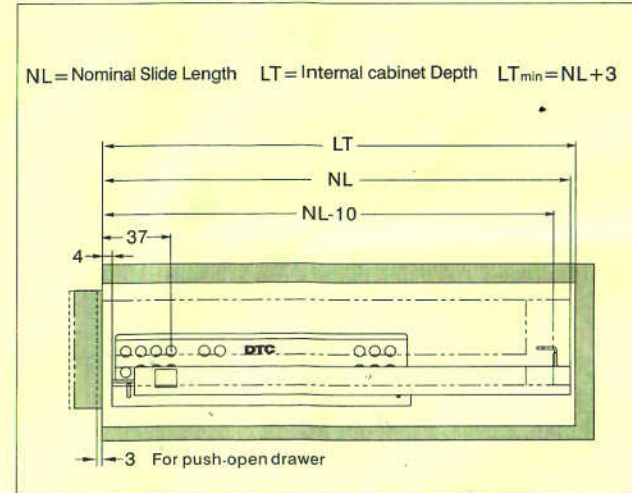


## Inner drawer installation dimensions

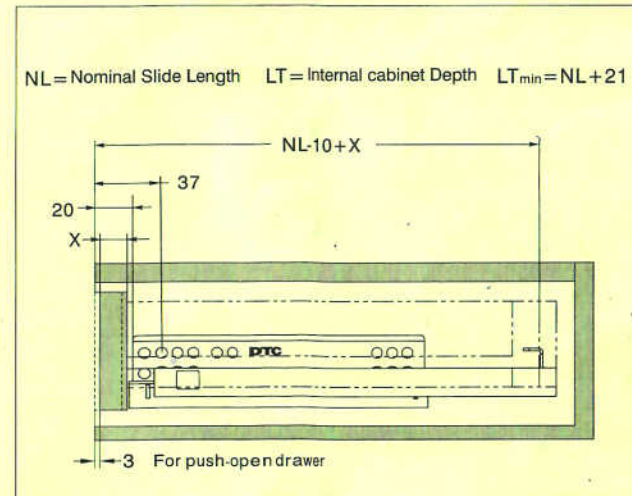


## Drawer preparation

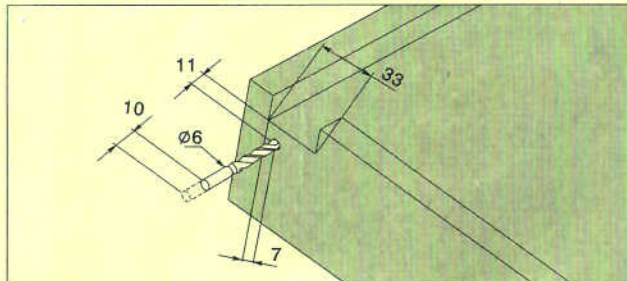

## Drawer preparation

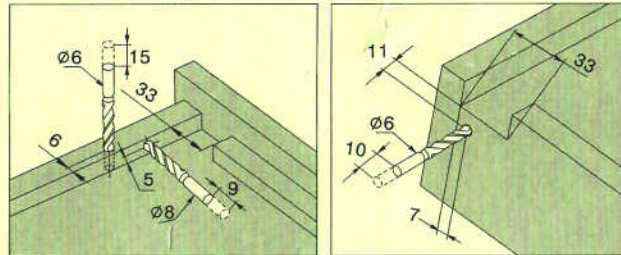

## Locking device installation

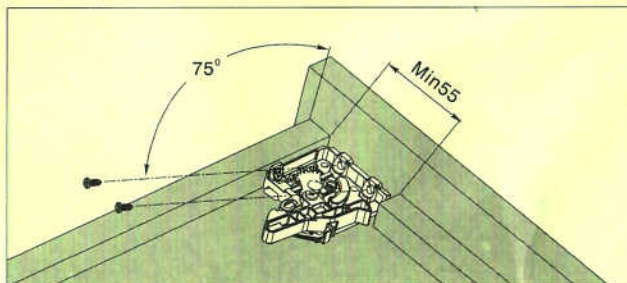


NL (mm)	A (mm)	B (mm)
250	190	200.5
270	205	215.5
300	245	255.5
350	270	280.5
400	305	319.5
450	330	369.5
500	355	419.5
550	390	469.5
600	415	519.5

**DTC**  
Global Quality Benchmark


Website: [www.dtcetc.com](http://www.dtcetc.com)

## Screw Positions of the Slides

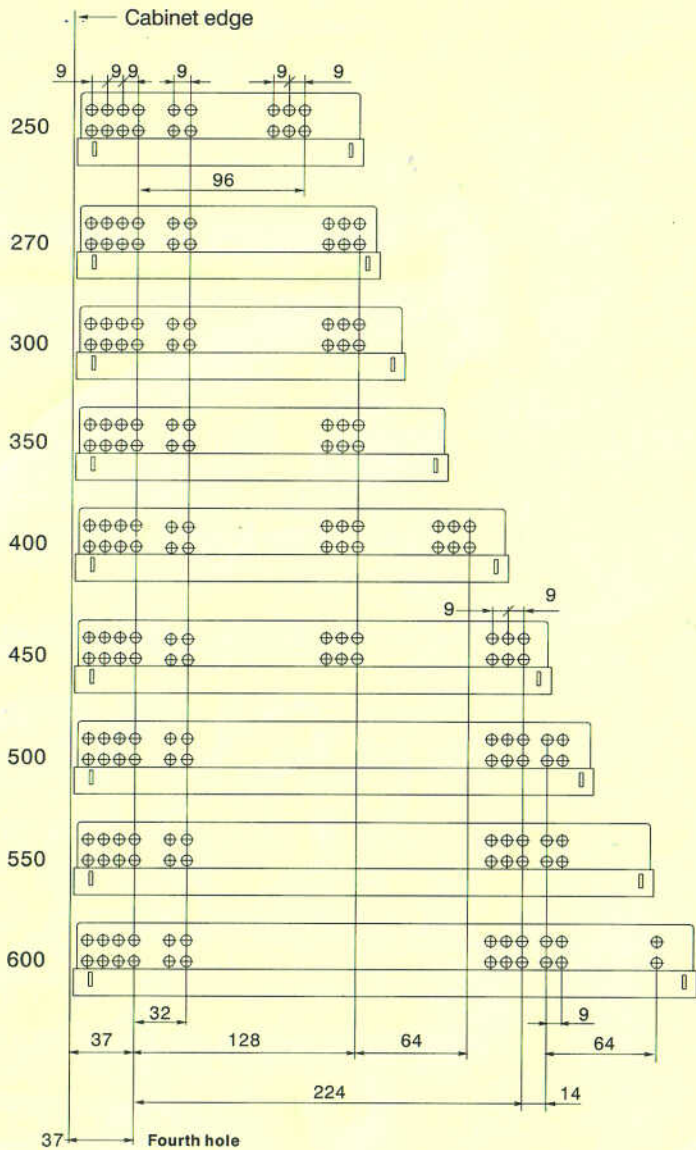


## Drawer assembly and removal (with locking device)


1. Fix the slide onto the cabinet.

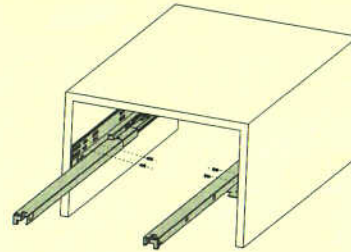


2. Fix the locking device onto the drawer bottom.

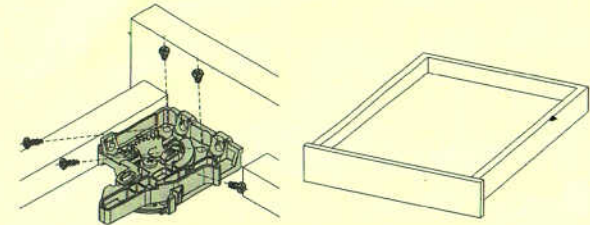

3. Lay the drawer bottom onto the slide then push the drawer into the cabinet.

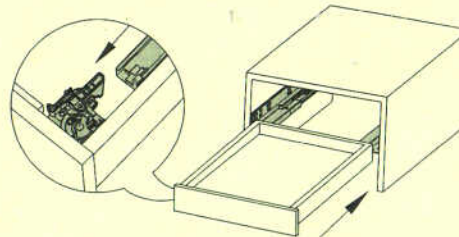


4. For removal, press and hold the handle and pull out the drawer.

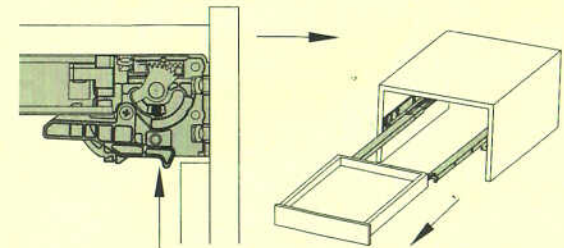


## Drawer assembly and removal (with peg)


1. Fix the slide onto the cabinet.

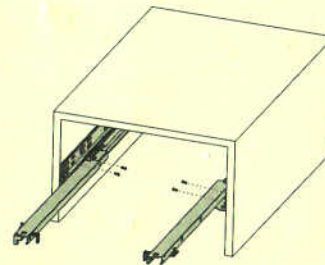

2. Pull out the drawer member of the slide from the cabinet, lay the drawer onto the slide.

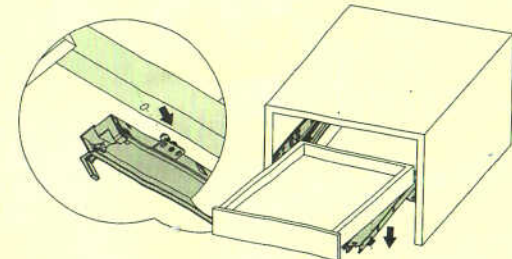

3. Press the locking pin into the drawer side to lock the position of the drawer.

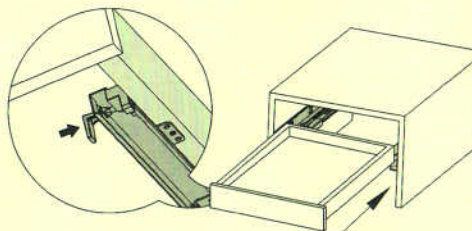

4. For removal, pull out the locking pin from the drawer side. Lift the drawer and pull it out from the cabinet.

